

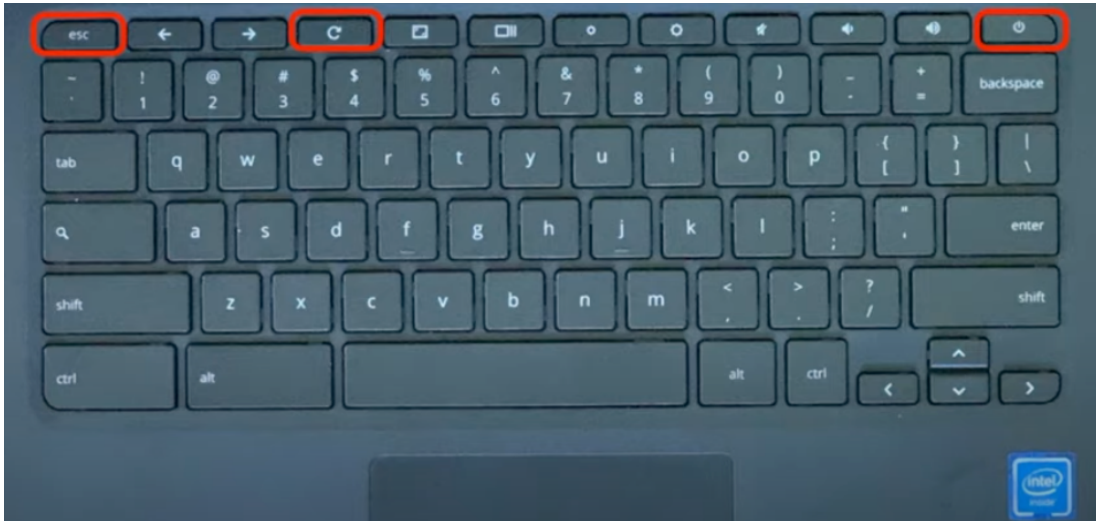


Release Your Chromebook (Powerwash)


1. To power down the Chromebook, hold down the Power button and release it once the screen turns off. Now, press Esc, Refresh and Power buttons at the same time. Hold down for 5 seconds and release.

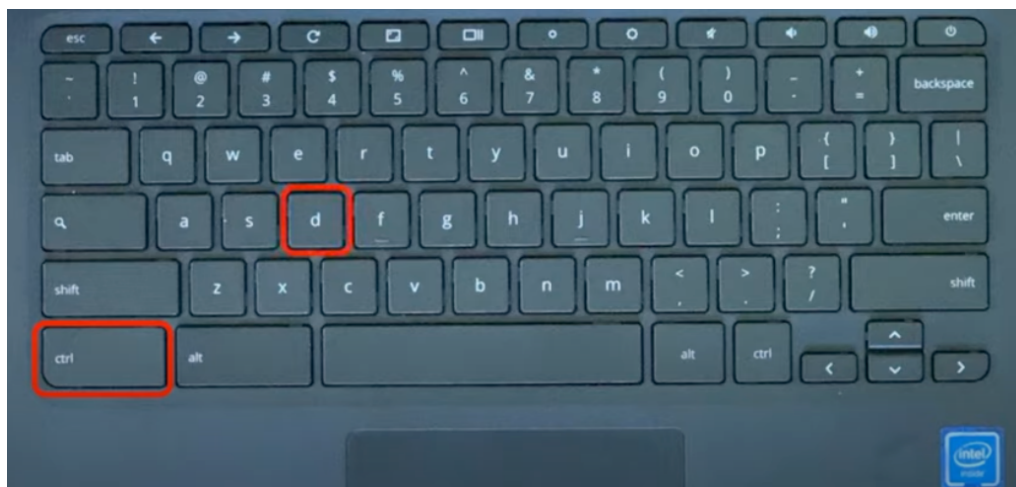


2. The “Chrome OS” screen appears. Press CTRL and D.

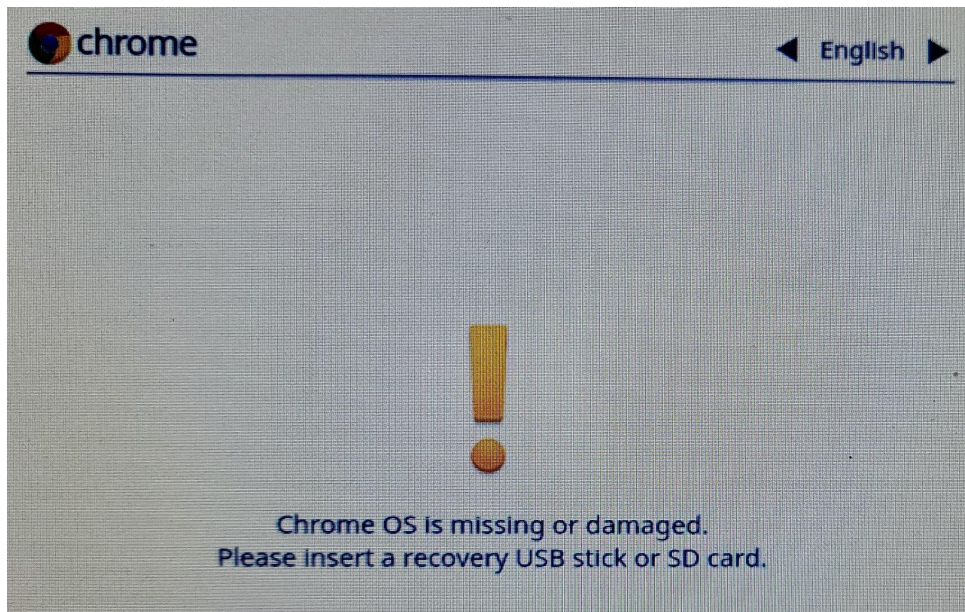


3. Press ENTER to turn off OS verification. Chromebook will restart.

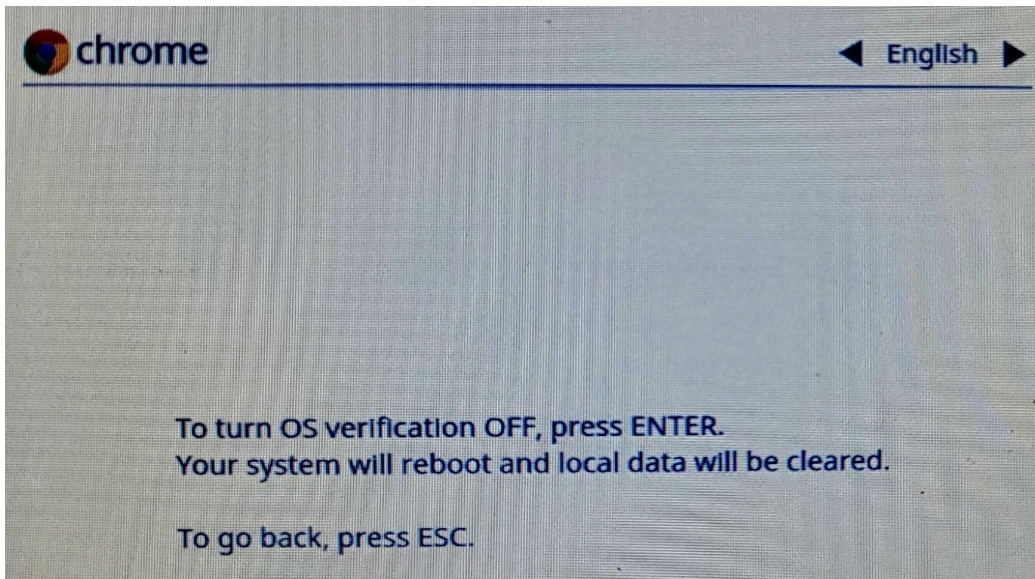


4. Press SPACE to re-enable OS verification.

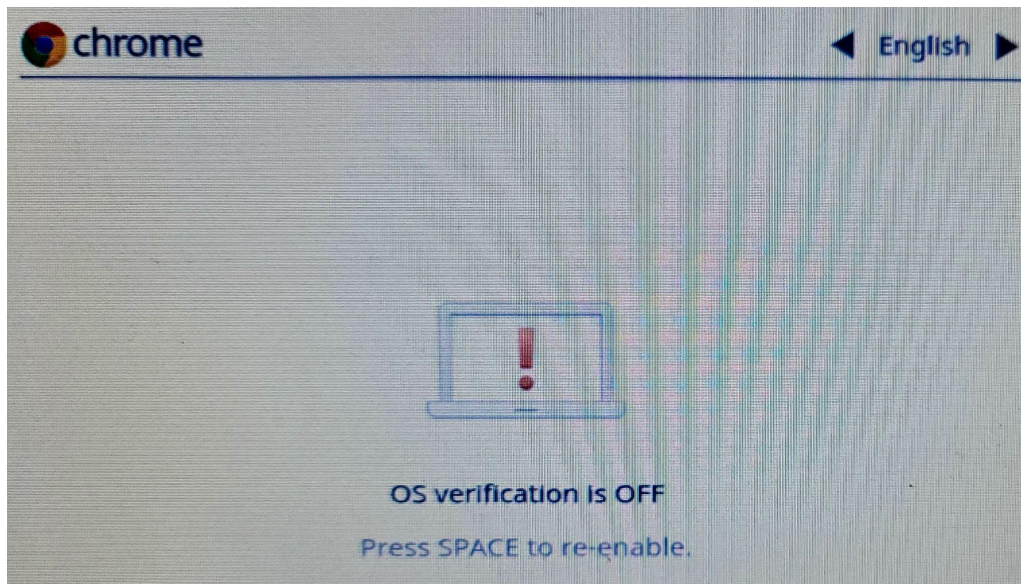


5. You are greeted by the Welcome screen. Click "Get Started."

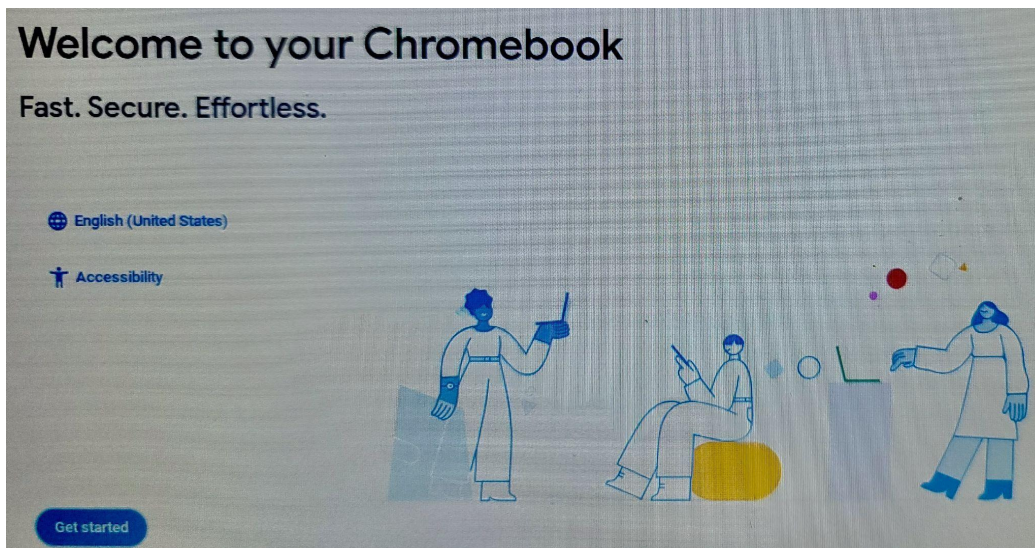

6. “Connect to Network” appears. Select your home's wireless network and enter the password. *Note: At a later step, you will be required to enter a personal Gmail address to complete your setup.*

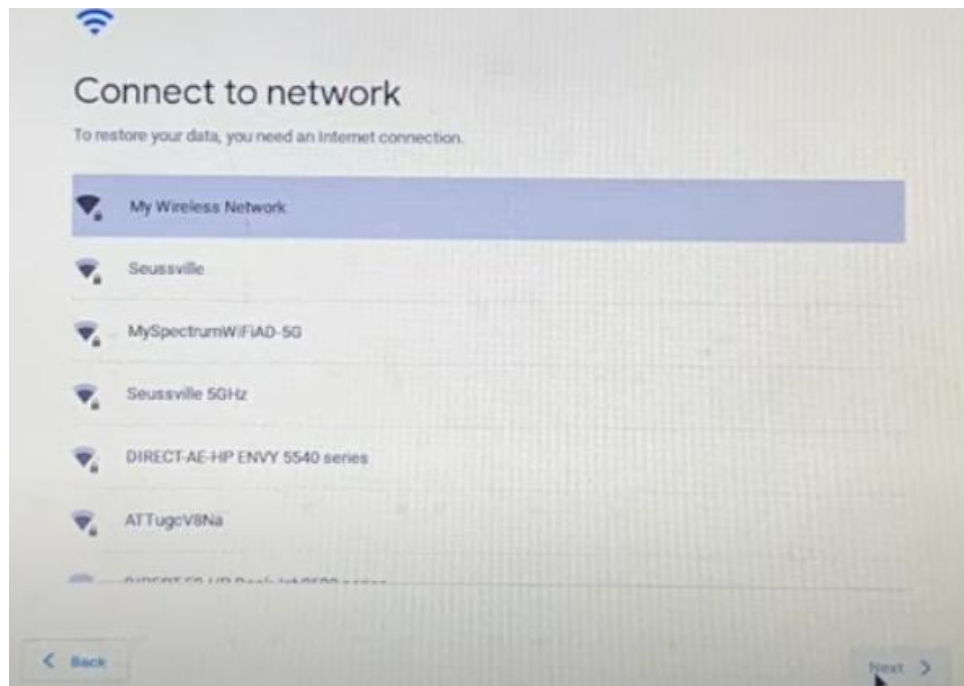

If “Managed by vesd.net” is displayed at the end of the setup process, this chromebook has not been released.

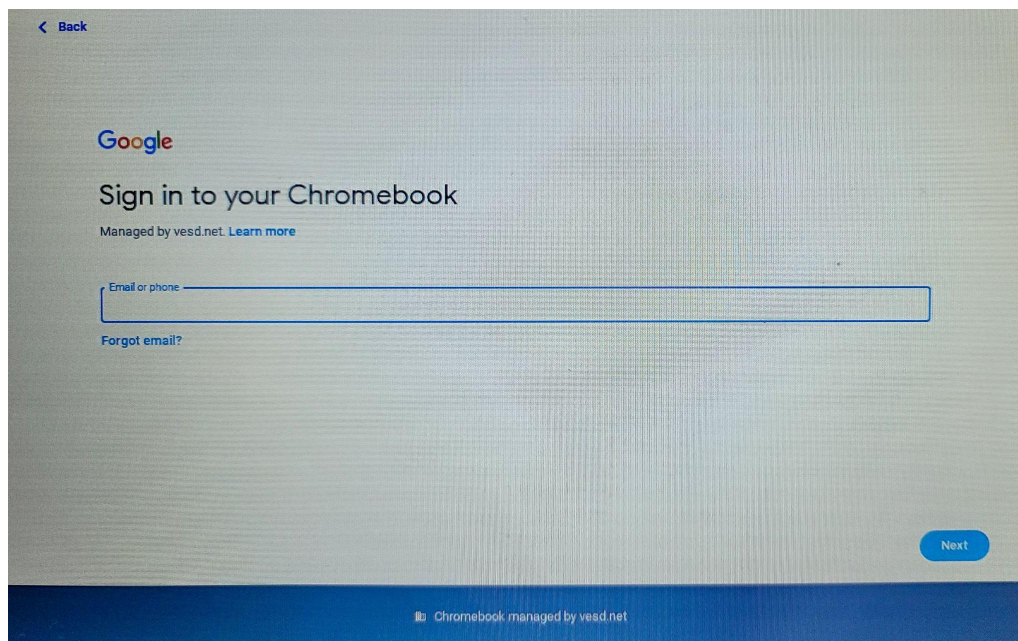

If this is the case, please email your student’s first and last name, school attended, teacher name, your phone number and the serial number of the Chromebook to CBRELEASE@VESD.NET. We will verify the release of your unit. This process is only valid for current graduating 6th graders.

If your 6th grader graduated in 2022 or prior years, we can no longer release the Chromebook. Please go to Google's [Chromebook Recovery](#) website for additional support.